


Quick Start Guide

Visible Light Programming (VLP) Photocontrol Sensor Option

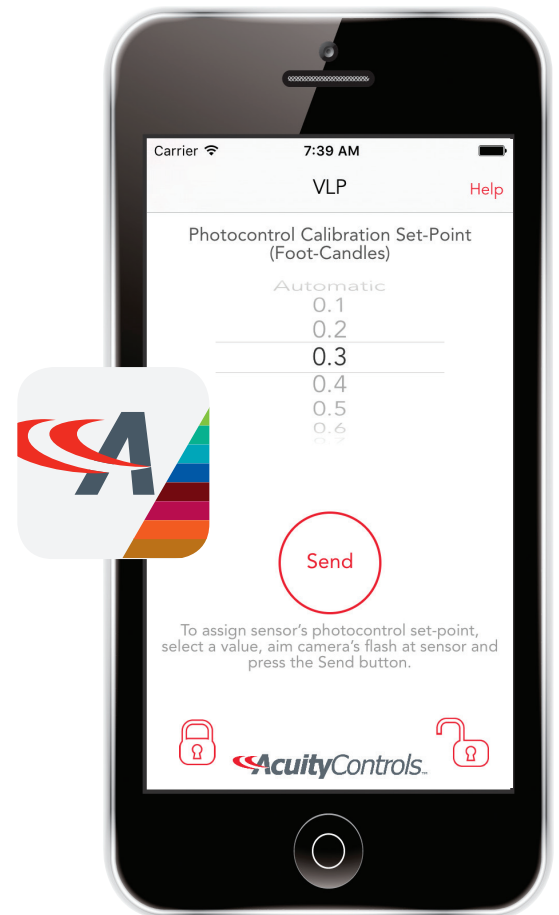

Download the App

Acuity Controls Visible Light Programming App (Acuity VLP)



Photocontrol Calibration:

1. Open Acuity VLP app.
2. Adjust the dial to the desired foot-candle value. If the desired foot-candle set-point is unknown, select the 'Automatic' option for the sensor to select an appropriate setting based on the perceived light level in the space.
3. Hold the smartphone up and position the camera's flash towards the sensor.
4. Press the Send button.
 - a. A series of flashes will transmit information to the sensor to adjust the daylighting setting.
 - b. The connected fixture will cycle On/Off once for confirmation of setting.

For questions on the app please call Technical Support at 800-535-2465.

NOTES:

1. The foot-candle setting represents the light level perceived by the sensor, not the light level at the work space. Due to variation of light distribution in a space, the light level perceived by the sensor may be different than the actual light level of the work space.
2. Do NOT stare directly at flash while transmitting to the sensor.

Part Number 911-00043-010