

# SensorView Installation Guide

## Step 1

### SENSORVIEW REQUIREMENTS

Depending on the intended usage of SensorView, there are two sets of computer hardware/software requirements.

- Single-user / Commissioning Installation: Recommend Windows 7 or Newer
- Multi-user Installation: Recommend Windows Server 2012 or Newer

Hardware Minimum Operating Specs:

- Ram: 2GB (4GB Recommended)
- Hard Drive: 20GB
- Browser: Firefox, Chrome, Opera, IE 10+

Versions of Windows supported (both 32 and 64 bit versions supported):

- Client Versions: 7, 8.1, 10
- Server Versions: 2012 (R2), 2016

Note: Virtual machine operation supported

## Step 2

### PRE-INSTALLATION

The following Windows software components are required prior to SensorView installation:

- .NET Framework
  - Available for download (free) from Windows Updates web page
- IIS (Internet Information Services):
  - IIS 7.0 Windows

NOTE: If .NET/IIS are not installed prior to running the SensorView installer, user will be automatically prompted to install these items during SensorView installation.

## Step 3

### SENSORVIEW INSTALLATION

The SensorView application installer is downloaded from the Acuity Brands website:

- <http://www.acuitybrands.com/-/media/Software%20Downloads/nLight/SensorViewInstallerv612%20zip.zip?la=en>

NOTE: Internet access is required during installation to download latest available version of the SensorView software.

## Step 4

### CONNECTION TO GATEWAY

The Gateway uses its port labeled "LAN" to communicate with the computer running the SensorView software.

- Please reference "SensorView User Manual" for details on methods to connect to a system Gateway.

**If assistance is required, please contact our technical support team at 800-535-2465 or [nLight-Support@AcuityBrands.com](mailto:nLight-Support@AcuityBrands.com).**