


The **CLAIRITY+** mobile app is the wireless commissioning tool for creating and customizing your nLight® AIR system. This document will lay out the basic commissioning process through the app. For more detailed information, please refer to the **CLAIRITY+** User guide.


Getting Started & Grouping Devices

STEP 1

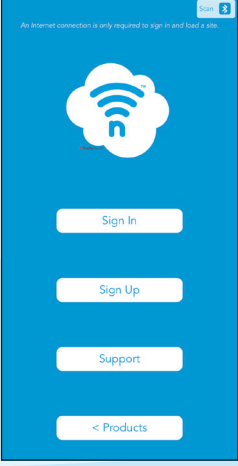


Create an account and sign-in to the app. It may take a little time to log in to ensure proper security is in place. Once signed in select the plus (+) button at the bottom of the page to create a new site.

STEP 2

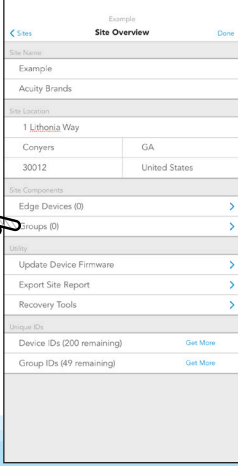


Enter the name and address information for your site, and then select Groups under Site Components.

STEP 3




Create a new Group by selecting the plus (+) button at the bottom of the screen. Once a group has been created, select **Devices** to begin adding devices.

STEP 4

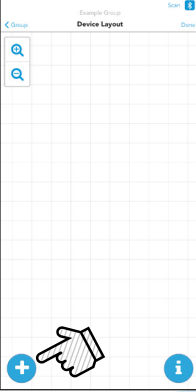


The device layout page is where you will be able to add and see the devices that are in your group. To begin simply tap the plus (+) button in the bottom left corner and select which device you want to add.

STEP 5



Tap **Identify** next to a device in the device list to make a device blink. Once you have correctly identified a device, tap the arrow next to identify and tap a space to place it on the grid.

STEP 6

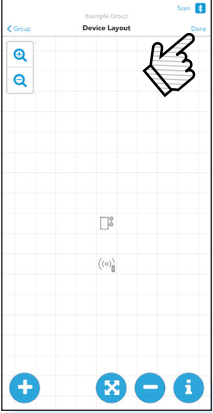


Once you have added all of the devices to your group, select **Done** in the top right corner to begin creating behavior zones and customizing your settings.

Behavior Zones are used to program behaviors for the devices in your group.


Creating Behavior Zones

STEP 1

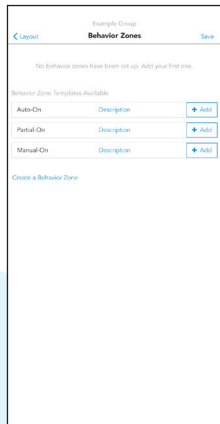


You have two options when creating a behavior zone. You can either select from the behavior zone templates (which have a description of what each does) or you can create your own behavior zone. Behavior zone templates apply to your entire group, and offer a quick option to save and finish the commissioning process.

STEP 2

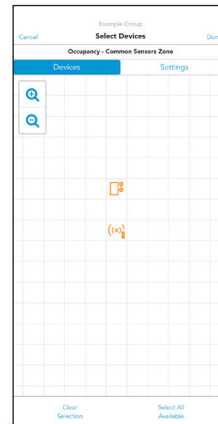


When creating a behavior zone, once you have selected the behavior type you want, select the devices on the grid that you would like to be part of this zone. Devices will turn orange when they are part of a behavior zone.

STEP 3

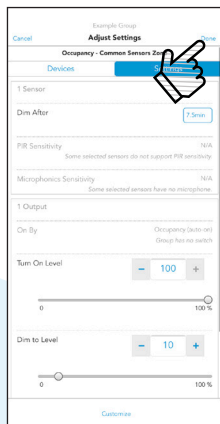

You can toggle between the devices and settings tab to select which devices you would like to adhere to specific settings. Tap **Done** in the upper right corner to complete this process.

STEP 4

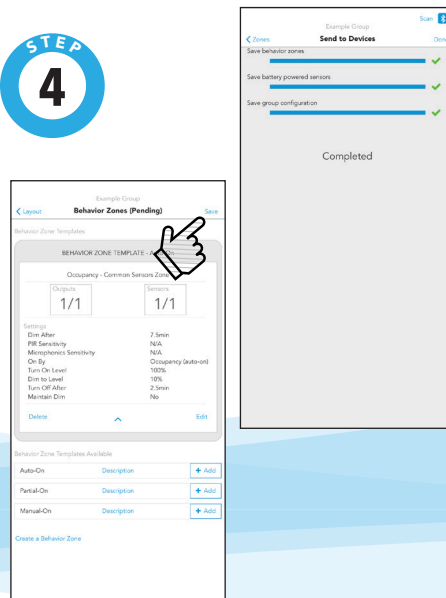

Once you are finished setting up your behavior zones, select **Save** in the top right corner. This will create your group, send behaviors to the devices, and complete the commissioning process.

Best Practices

The below are general best practice items when using CLAIRITY+.

- Do not connect nLight AIR devices to switched power. Though the devices have nonvolatile memory, they should be connected to constant power.
- Do not add devices to different sites if the devices are part of the same building (or entity). If devices are being added to a location that already includes nLight AIR devices, new devices should be added to the existing site.
- Do not place devices randomly on the grid. Place devices on the grid with orientation from the primary entry point into the space.
- Do not Force Decommission devices. Devices that are decommissioned will become "stranded", and recovering stranded devices may require assistance. Contact technical support (800-535-2465, Option 2) before force decommissioning devices.
- Include only the necessary number of devices within a group. Smaller groups commission more quickly.
- Group Firmware Updates should be used to update device firmware for standalone groups. However, Individual Firmware Updates should be considered to reduce overall firmware update time. Firmware updates are recommended to enable new features or for compatibility when devices have major firmware version differences.
- Do not exit a group after saving or removing devices. Always Save, which can be done using a templated Behavior Zone or by saving the group with no behaviors.
- Use Group Troubleshooting if information seems out of sync. Group Troubleshooting may be needed if firmware is updated or if Behavior Zones are modified through another device or software (such as SensorView).
- If device stickers are not placed on a document of record (electrical set or submittal), label devices within the app. E.g., Downlights 2 or Circuit HR-1.



For more details on how to use the CLAIRITY+ app, please refer to the User guide which can be found by scanning this QR code.

Thank you for choosing Acuity Brands.